


Operating the 3D-Glasses

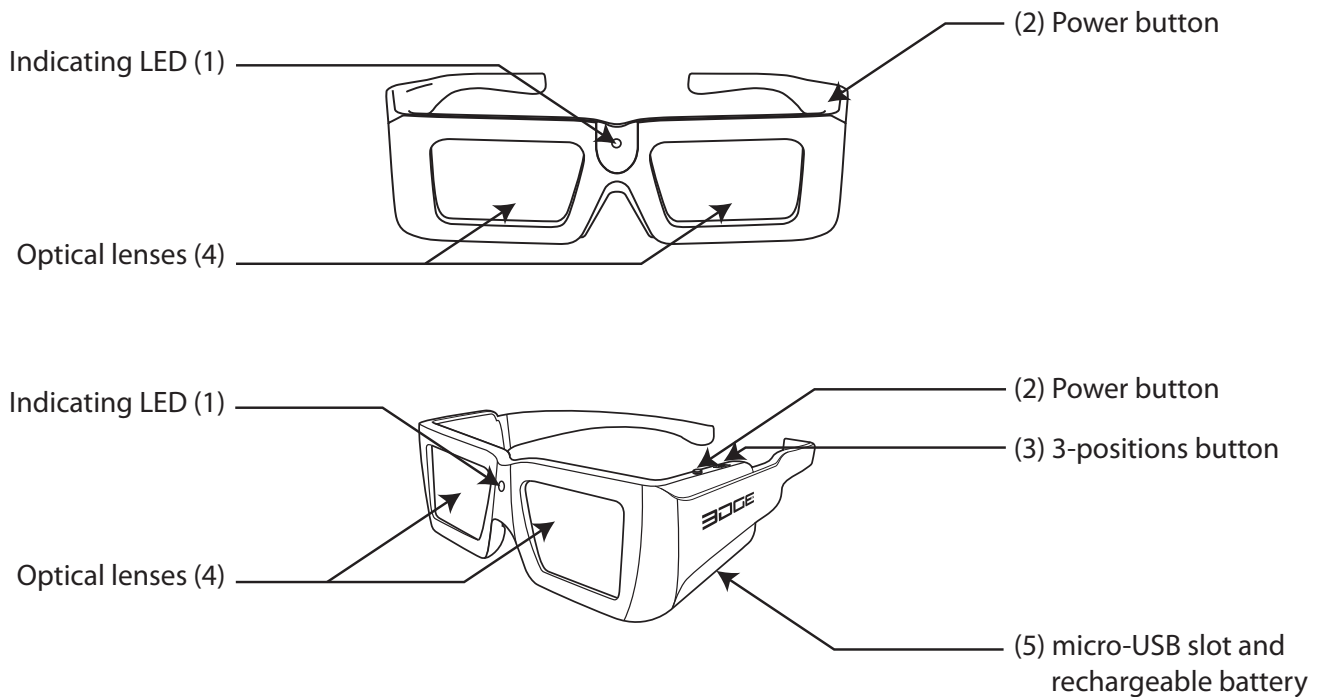

1. Charging the 3D-Glasses

The 3D-Glasses come with a USB-rechargeable battery (5) that is charged using the USB to micro-USB cable. Connect the cable to the micro-USB slot. The indicating LED (1) will light On red continuously during the charge. The Glasses are fully charged when the indicating LED (1) switches OFF.

2. Turning On your 3D-Glasses

- a. Press the Power Button (2) once.
- b. The indicating LED (1) will light ON red and the 3D-Glasses are ready to synchronize with the projector.

3. Turning Off your 3D-Glasses

To turn Off the glasses, press the Power Button (2) during 3 seconds until the indicating LED (1) switches off.

4. 3D-Glasses battery power

The battery allows up to 75 hours of continuous power. When the battery power is low, the lenses (4) will flash slowly (1 second) when the 3D-Glass is powered On.

5. How to use the 3-positions button (3)

The 3-positions button (3) is used to select a functioning mode. By default, the glasses are configured to function with 3D pictures. You can select with the 3-positions button to either watch only left pictures on both eyes or only the right pictures on both eyes of the glass.

6. Efficiency

The 3D-Glasses are programmed to automatically stop functioning after 5 minutes of immobilization. To turn them back On, just press the Power Button (2) once.